

FIG. 1

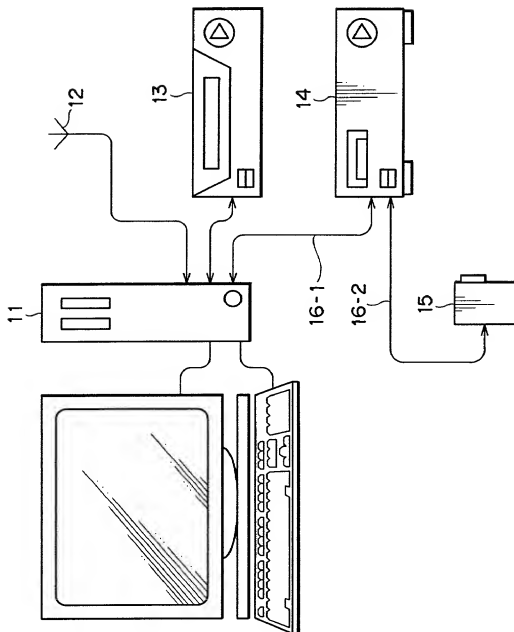 


FIG. 2

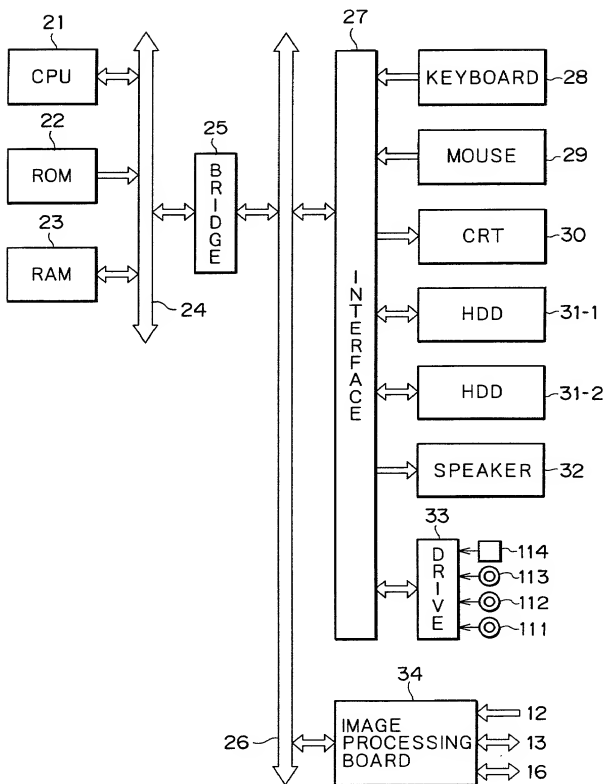 


FIG. 3



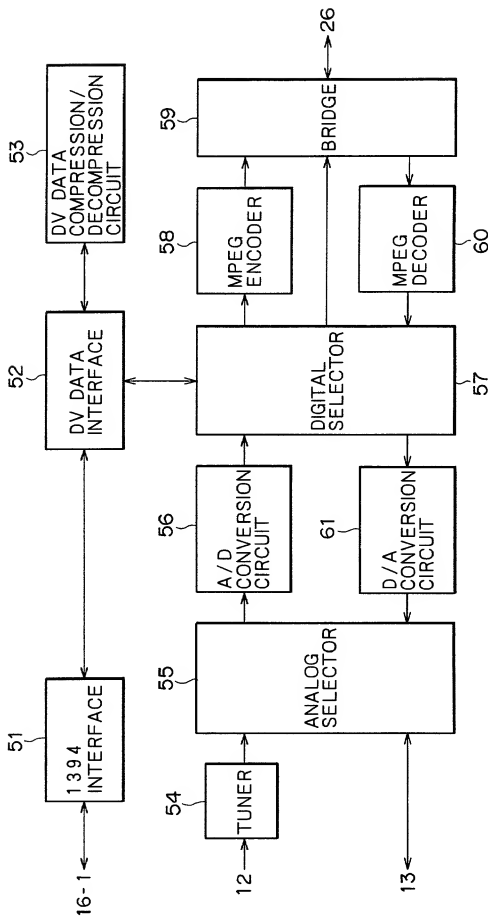 



FIG. 4

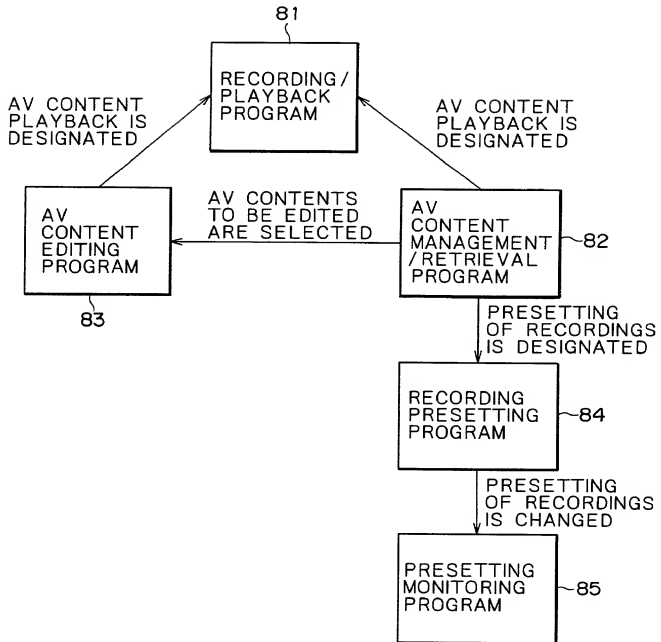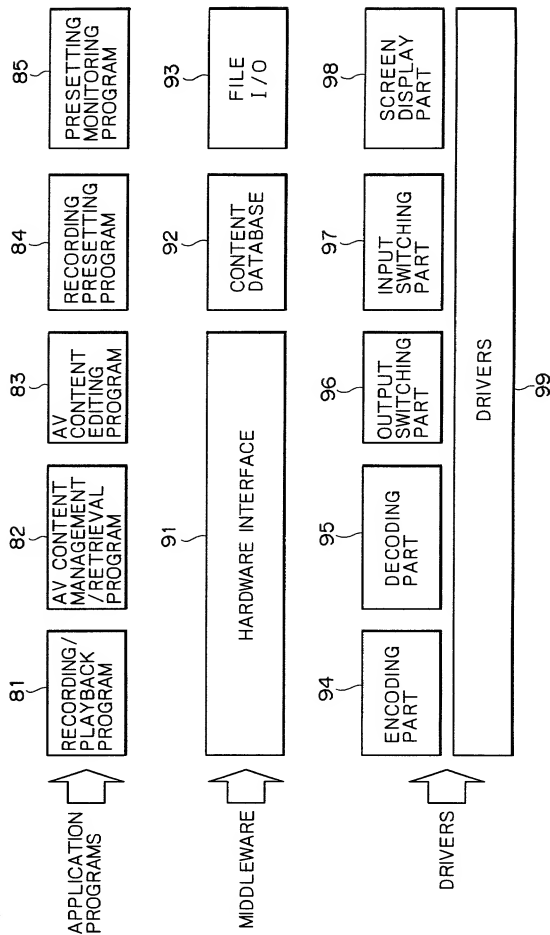 

09773918.020001

FIG. 5

 

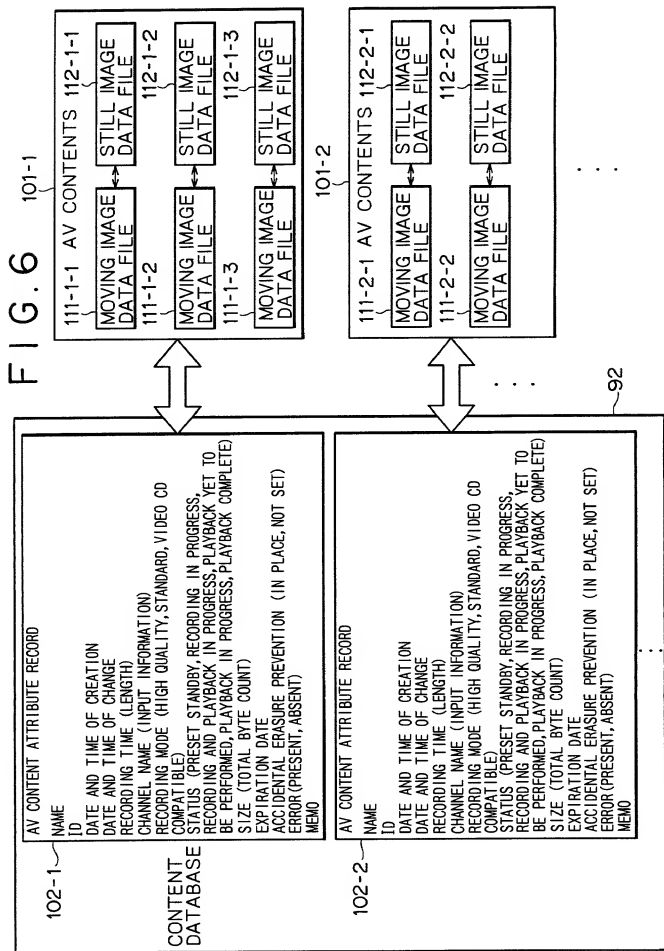 

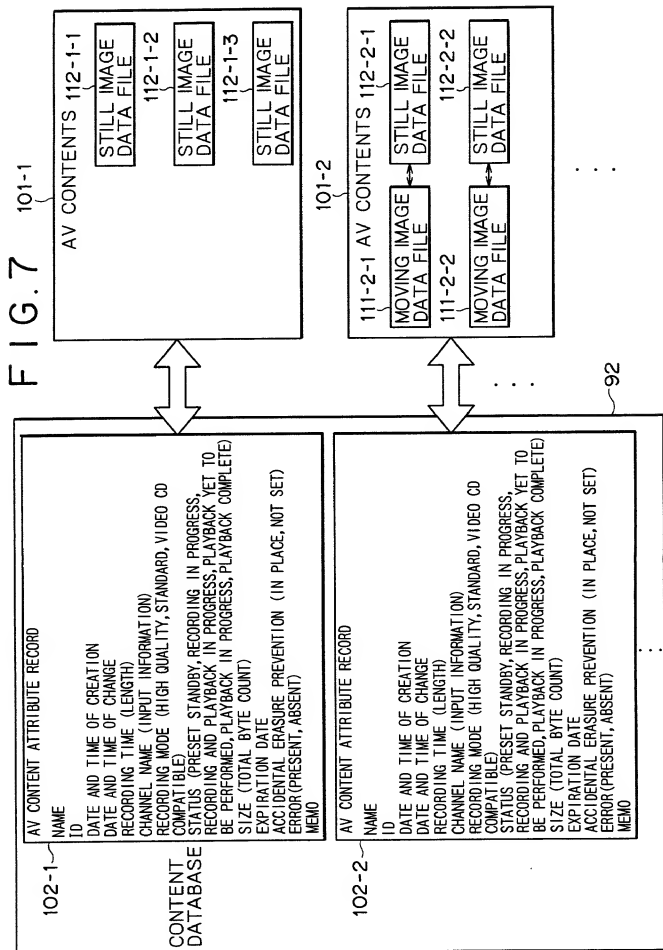 


FIG. 8

92

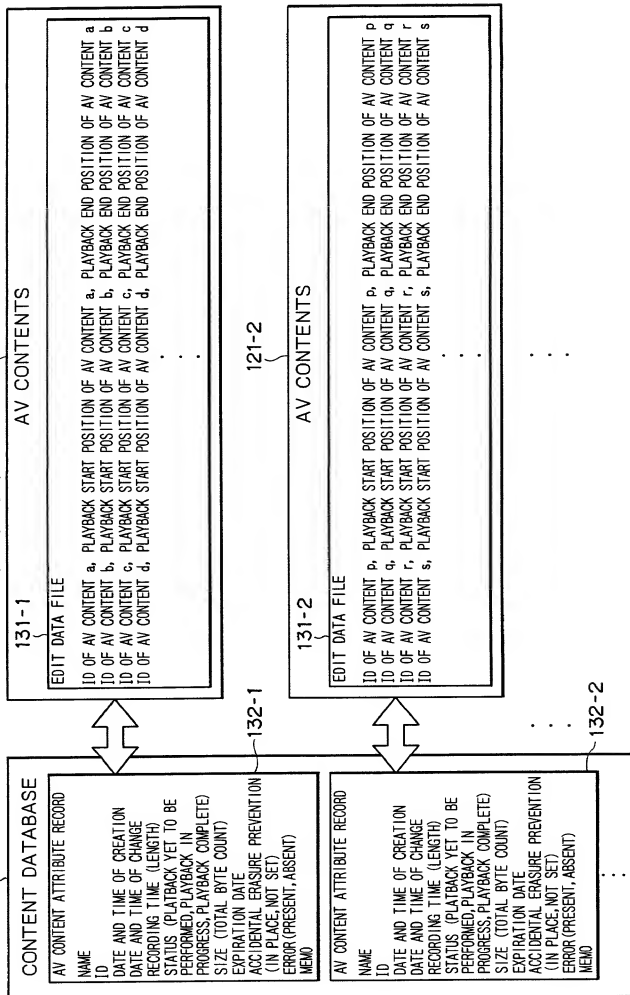




 FIG. 9

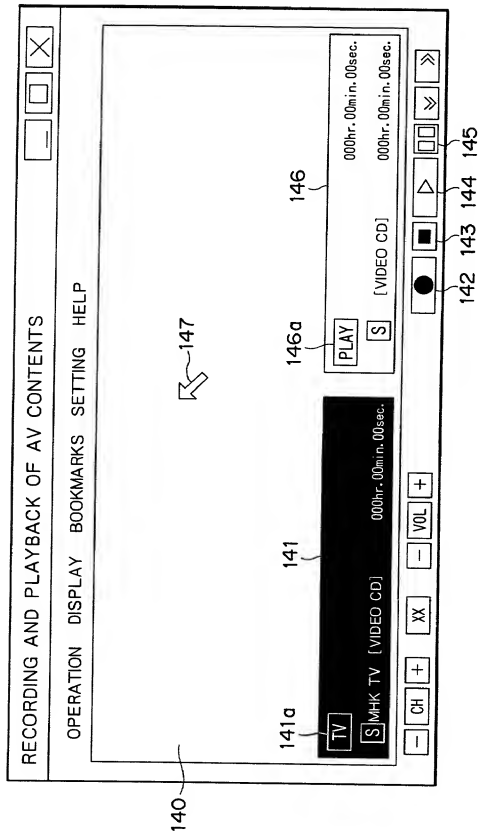 


FIG. 10



FIG.11A

 


FIG.11B

 


FIG.11C

 


FIG. 12

SETTING OF RECORDING END TIMES

SET TIMES AT WHICH TO END RECORDING

☒ SET PERIOD OF TIME TO ELAPSE FROM START OF RECORDING

END AFTER: 30min. ▼

☐ SPECIFY WHEN TO END RECORDING

END AT: 1hr.  
1hr. 30min.  
2hr.  
2hr. 30min.  
3hr. MINUTES

☐ SPECIFY MAXIMUM RECORDABLE TIME

END AT: 23:22, FEBRUARY 24

OK CANCEL HELP

102020-6162760

## FIG.13

09773918-020001

SETTING OF RECORDING END TIMES

— SET TIMES AT WHICH TO END RECORDING —

☐ SET PERIOD OF TIME TO ELAPSE  
FROM START OF RECORDING

END AFTER: 30min. ▼

☐ SPECIFY WHEN TO END RECORDING

END AT: 12 hr. 34 min.

☒ SPECIFY MAXIMUM RECORDABLE TIME

END AT: 23:22, FEBRUARY 24

OK CANCEL HELP

Figure 1 is a schematic diagram of a video player's control interface, labeled 140. The interface is divided into three main sections. The top section contains a title bar with icons for recording, playback, and help. The middle section contains a menu bar with options: OPERATION, DISPLAY, BOOKMARKS, SETTING, and HELP. The bottom section contains a control panel with various buttons and indicators. On the left, there are buttons for TV (141a), MHK TV (141), and VIDEO CD (146). In the center, there are buttons for PLAY (146a) and S (146). On the right, there are buttons for CH (142), VOL (143), and a set of navigation buttons (144) including a play button, a stop button, and a fast forward button. The entire interface is labeled 140.

FIG. 15

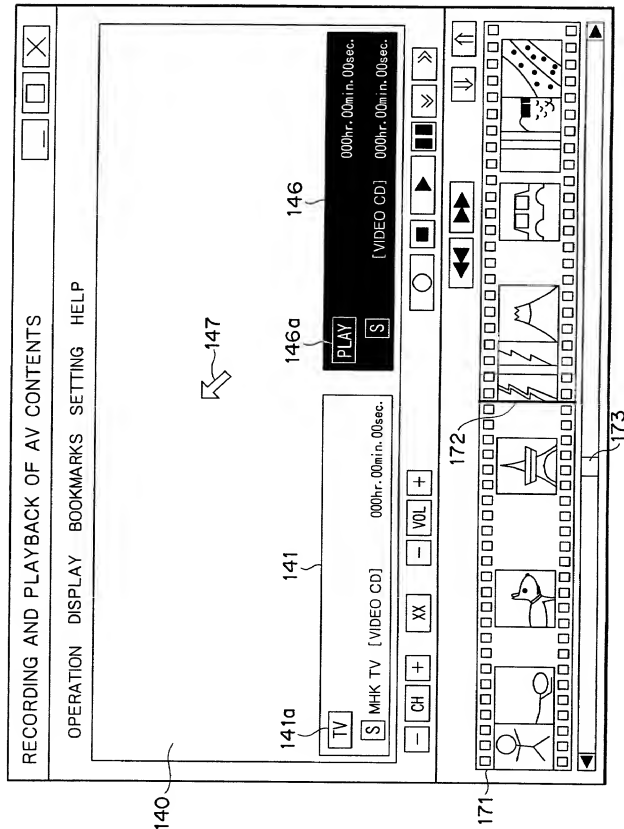 


FIG. 16A

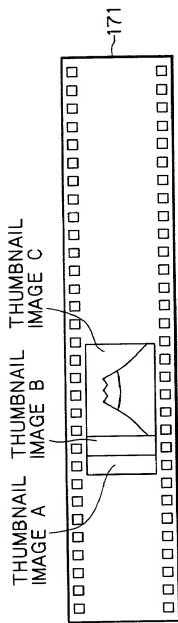
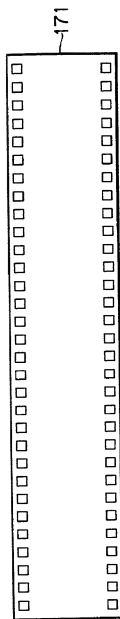 


FIG. 16B

 



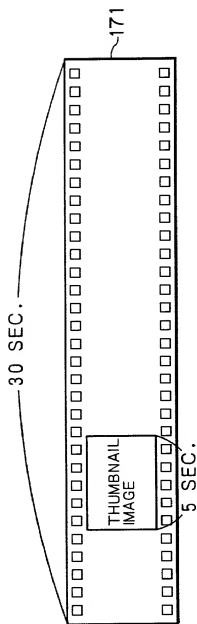 


FIG. 17A

 


FIG. 17B

102020-3162260

F I G . 1 8

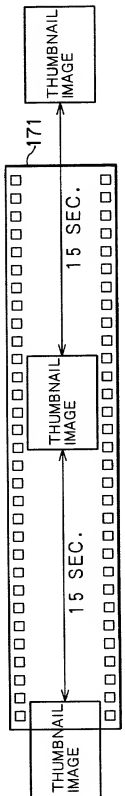 


FIG. 19


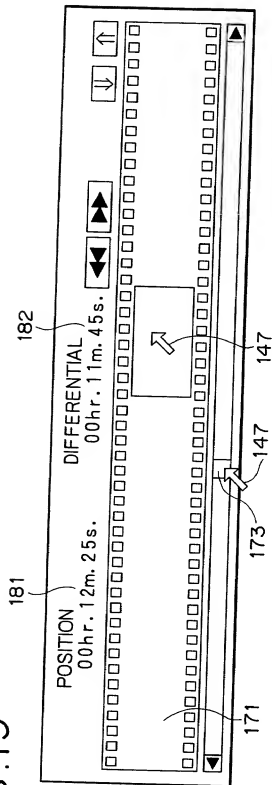 


FIG. 20

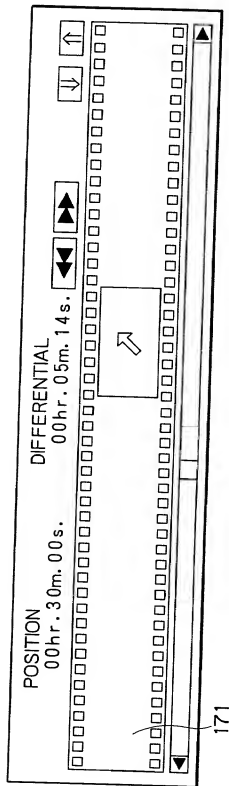 

102020-6166260

FIG. 21A

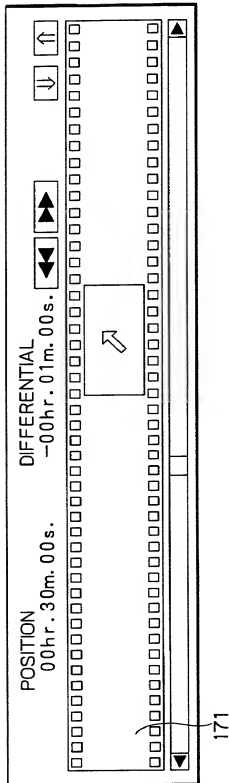 


FIG. 21B

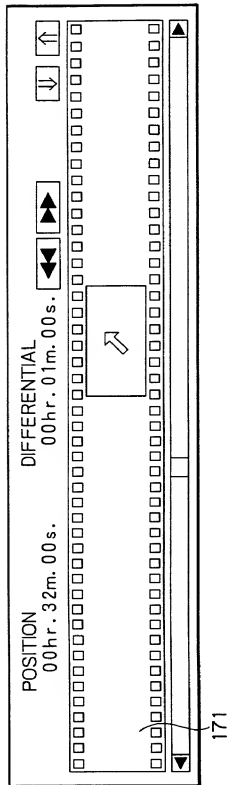 


FIG. 22



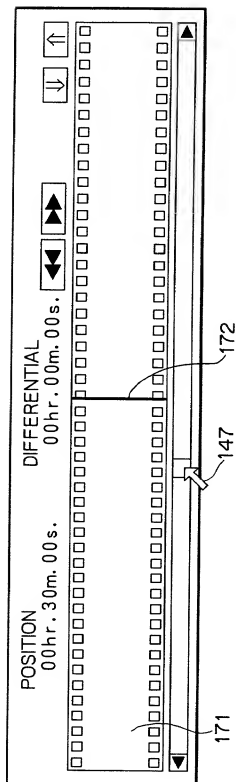 


FIG. 23

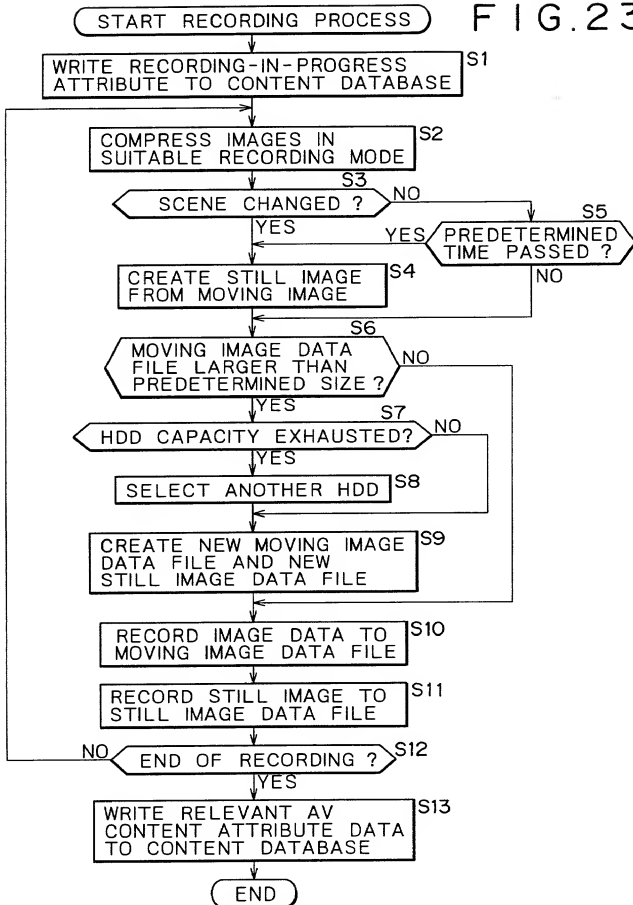 


09773918.002001

 FIG. 24

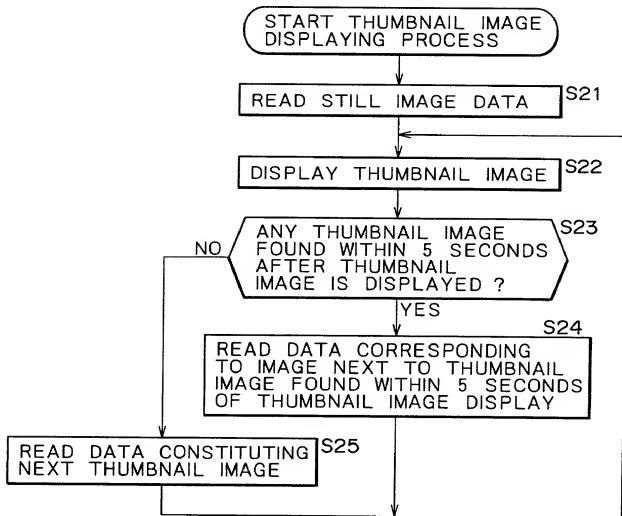

09773919-020201

 FIG. 25

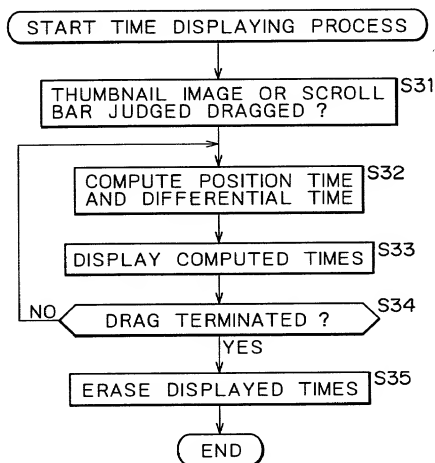

09773918-020201